
## TEXAS A&M UNIVERSITY

Hardware Implementation of a Desktop Supercomputer for High Performance Image Processing

ONR Grant Number N00014-94-1-0516

Technical Report Nov/01/95-Feb/01/95



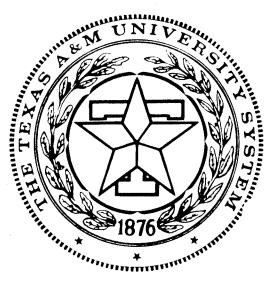

19950217 033

DEPARTMENT OF ELECTRICAL ENGINEERING
College Station, Texas

DISTRIBUTION STATEMENT A

Approved for public release; Distribution Unlimited


## Hardware Implementation of a Desktop Supercomputer for High Performance Image Processing

ONR Grant Number N00014-94-1-0516

Technical Report Nov/01/95-Feb/01/95

ROBUST TESTING OF CELLULAR NEURAL NETWORKS



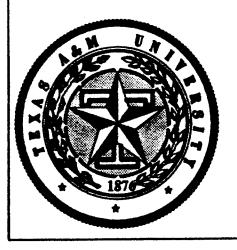

Dr. Jose Pineda de Gyvez

# **Texas A&M University**

Microelectronics Group

Department of Electrical Engineering
College Station, TX, 77843

Phone: (409) 8457477 FAX: (409) 8457161

Email:gyvez@pineda.tamu.edu

DTIC QUALITY INSPECTED 4

DISTRIBUTION STATEMENT A Approved for public release;
Distribution Unlimited

## **Table of Contents**

| 1.  | Introduction 1                     |
|-----|------------------------------------|
| 2.  | Behavioral Aspects 1               |
| 3.  | Electrical Topology                |
| 4.  | Classification Of Circuit Faults 4 |
| 5.  | Behavioral Fault Testing 4         |
| 6.  | Fault Identification7              |
| 7.  | Parametric Fault Testing 8         |
| 8.  | Fault Case Studies 10              |
| 9.  | Conclusions 12                     |
| 10. | References 12                      |
| 11. | Appendix 13                        |

| Accesi  | Accesion For                |         |  |  |  |  |  |  |
|---|-----------------------------|---------|--|--|--|--|--|--|
| NTIS CRA&I DTIC TAB Unannounced Justification |                             |         |  |  |  |  |  |  |
| By<br>Distrib                                 | By                          |         |  |  |  |  |  |  |
| А   | vailabilit                  | y Codes |  |  |  |  |  |  |
| Dist  | Dist Avail and / or Special |         |  |  |  |  |  |  |
| A-1   |                             |         |  |  |  |  |  |  |

#### 1. Introduction

Cellular Neural Networks (CNN's) are a special class of continuous time neural networks often used for real time image processing. The two dimensional CNN has proved useful for edge detection, noise removal, image thinning, hole filling, image filtering, motion detection, and character recognition[1]. The robust design of CNN's often requires a large number of simulations for design verification. Unfortunately, the circuit representations of the CNN are large and require much CPU time to simulate circuit faults. We propose a CAD tool that generates SPICE macromodels to simulate faults in the hardware of two different CNN topologies. These topologies are the voltage mode and the current mode CNN. The electrical parameters of each macromodeled element are annotated with parameters to match real hardware implementations. The complete CNN macromodel is then simulated using SPICE. The results of the simulation are used to characterize the behavior of a CNN and it's sensitivity to parameter variation, among other things. In other words, the macromodeling fault generator offers the capability for parametric and catastrophic fault simulations. Chua [2] originally introduced a piecewise linear SPICE simulator for simulating the CNN architecture. His model provided the capability for simple CNN simulations, but lacked the ability to model the interconnection impedances of real hardware architectures. Lee [3] and Varientos [4] both presented software CNN behavioral simulators that yield quick results, but that lack the ability to model any of the electrical parameters found in hardware implementations. Macromodels provide the capability to model offsets, impedance mismatches, and other circuit nonidealalities. The reduced complexity of the proposed CNN macromodels allow results to be obtained more quickly than a complete transistor level circuit model. Simulating macromodeled CNN arrays provides an attractive compromise between behavioral simulations and complete circuit simulations.

#### 2. Behavioral Aspects

A two-dimensional CNN array contains MxN locally connected cells. A 5x5 CNN array is shown in Fig. 1. The CNN array is controlled by choosing the initial conditions, setting inputs, and selecting the desired mode of operation. The CNN provides three behavioral modes of operation. They are: i) Cell initialization, ii) Evaluation, and iii) Result extraction. The behavioral modes are selected by two mutually exclusive voltage controlled inputs, SetIC and Eval, that activate two voltage controlled switches inside the integrator. In the initialization phase, the summer is disconnected from the integrator to allow the state of the cell to start at a known initial condition. The initial condition is selected by activating the signal SetIC. When SetIC is activated the initial condition voltage (IC) is applied directly across the capacitor, which is the physical quantity that represents of the state of the cell. In some applications it is desired to use the input image as the initial condition of the array. For this case, the IC signal is connected to the IN11 signal of each cell. The evaluate mode is entered when the Eval signal is activated which connects the summer to the integrator and allowing the dynamic processing to commence. If neither SetIC nor Eval is activated, the output stage is separated from the integrator and ideally the state of the cell is held indefinitely.

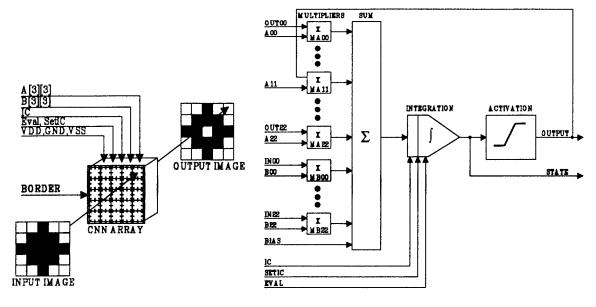


Fig. 1 - CNN Array Block Diagram

Fig. 2 - CNN Cell Macromodel Block Diagram

#### 3. Electrical Topology

The macromodeled CNN cell contains 42 voltage inputs and 1 voltage output as shown in Fig. 2. The cell has both global and local voltage inputs. The global inputs are common to all cells and include the feedback template (A00-A22), the control template (B00-B22), the bias value (Bias), the mode control values (SetIC and Eval), the initial condition value (IC), and the power supplies (VDD, GND, and VSS). The local inputs (IN00-IN22, OUT00-OUT10, OUT12-OUT22) are unique to each cell and are determined by the location of the cell within the CNN array. Each cell in the array has an activated output voltage (OUTPUT) and optionally a pre-activated output voltage (STATE). The addition of the STATE output is motivated by Pineda's research into the application of a multilayer CNN used to process color images[5]. The cells located on the outer edges of the array obtain their INxx and OUTxx inputs from the Border value, which is added to the basic CNN architecture to facilitate testing of the array.

The CNN macromodel consists of multipliers, a summer, an integrator, and an activation function. The internal processing of the cell may take place in either the current or voltage domains. Current mode operation is characterized by the use of transconductance multipliers, a current summer, and a current integrator. The voltage mode CNN makes use of voltage multipliers, a voltage summer, and a voltage integrator. In either case, the inputs and outputs of the CNN macromodel are voltages. Each element of the macromodel contains complex input/output impedance's to simulate interconnection parasitics, voltage sources to simulate offsets, and the corresponding elements to perform its original function. The use of the generic complex impedance block is considered a single element in the fault analysis. The complex impedance block may be used to introduce poles and zeros into the transfer function of each macromodeled block.

The current mode (transconductance) and the voltage mode multiplier are shown in Fig. 3. Current mode multipliers are implemented using a voltage controlled current source with an annotated transconductance value, gm. Voltage mode multipliers are based upon voltage controlled voltage sources with an annotated voltage gain, Av. The multiplier input voltages are developed across a line impedance, an offset voltage source, and across a load impedance. One can think of the line impedance as representing the impedance of the path between the output of a cell and the input to the specific

multiplier. The multiplier generates an output that is proportional to the product of the two input load voltages. The current/voltage output is developed across/through a source impedance and then diode limited to the supply range to simulate the saturated region of actual multipliers. Although HSPICE simulator allows dependent sources to be annotated with a minimum and maximum value to model saturation, we used diode limited outputs in our macromodels for SPICE compatibility purposes.

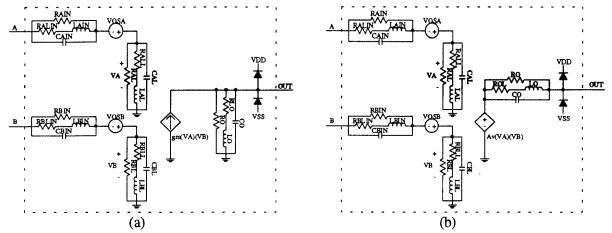


Fig. 3 - Macromodeled Multipliers - (a) Transconductance Multiplier, (b) Voltage Multiplier

The macromodeled summers shown in Fig. 4 accept the outputs of the 18 multipliers and the *Bias* voltage to produce an output proportional to their sum. This output can be a current or a voltage depending upon the CNN topology. The current mode summer requires that the *Bias* voltage is first converted to a current before the summing with the multiplier currents. The current is summed by a simple wire, developed through a source impedance, and diode limited to avoid unbounded output values. Note that the summer contains a load impedance to provide a DC path to ground when the summer is disconnected from the integrator. The voltage mode summer requires a dependent voltage source that produces the sum of the 19 voltage inputs. The voltage output is developed through a source impedance and is diode limited to the supply rails.

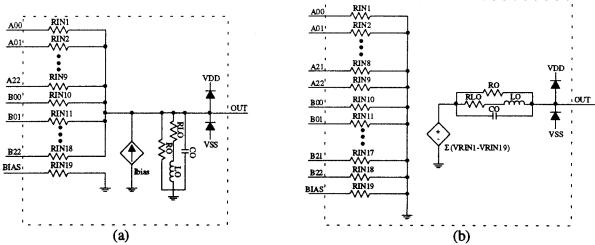


Fig. 4 - Macromodeled Summers - (a) Current Summer, (b) Voltage Summer

The integrator contains the processing elements of the CNN that primarily determine the dynamics of the array. Fig. 5 shows the block diagram of the current mode and voltage mode integrator. The current mode and the voltage mode integrator both contain two voltage controlled switches. The SW1 switch is controlled by the SetIC signal and when activated forces the state of the cell to the voltage applied at the IC input. The SW2 switch is controlled by the Eval signal and when activated connects

the output of the summer to the integrator. If both *SetIC* and *Eval* are inactive, the state of the cell is held until the capacitor discharges. The mode control switches are modeled using ideal voltage controlled resistors that are annotated with "on" and "off" resistance to model real switches.

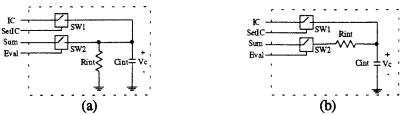


Fig. 5 - Macromodeled Integrators - (a) Current Integrator, (b) Voltage Integrator

The activation function of the CNN is identical in both the current mode and the voltage mode CNN. The activation function is modeled using a polynomial voltage controlled voltage source as shown in Fig. 6. The polynomial source can be adjusted to model any shape activation function, any gain, and any output offset voltage. The output voltage is developed through an output resistance and diode limited to the supply range. Note that the output voltage is internally fed back to the input of feedback multiplier A11, eliminating the need for an external OUT11 input signal. The result is that each CNN cell has only 8 inputs (OUT00-OUT10 and OUT12-OUT22) required from the surrounding cells outputs.

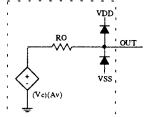


Fig. 6 - Macromodeled Activation Function

#### 4. Classification Of Circuit Faults

We have chosen to classify circuit faults within a CNN array into two categories: hard and soft faults. Hard faults consist of opened, shorted, or stuck-at supply nodes usually resulting from design or processing flaws. Hard faults are easy to detect because the behavior of a faulted array will not match the unfaulted behavior during static tests. Soft faults consist of mismatches in the time constants, offset voltages, and reactive impedance faults usually caused by a miscentered design process. Soft faults are difficult to characterize as they may or may not adversely affect a CNN array depending upon the particular application. A criteria to define a soft fault based upon its adverse effect must be defined. Unfortunately, the adverse effect of a fault depends on the particular CNN application. For this presentation, more than a  $\pm$  2% variation in the nominal time constant, more than  $\pm$  10% of the power supply in offset voltage, and more than a  $\pm$  10% variation in the nominal impedance are considered faults. The behavioral tests are designed to detect hard faults and the parametric tests are designed to detect the soft faults.


#### 5. Behavioral Fault Testing


A robust testing strategy must provide maximum fault coverage in a minimum number of test vectors. Our macromodeled current and voltage mode CNN cell contains 74 and 94 internal nodes, respectively. Bear in mind that these macromodels were designed to match possible monolithic implementations.

They differ from Chua's basic macromodels[1] in that they try to mimic the actual hardware implementation as opposed to only simulation behavioral effects. Naturally, if the number of cells is multiplied times the number of internal nodes, and the global and local inputs/outputs are added, the magnitude of the testing problem becomes apparent.

Fault detection in a production environment should be comprised of a minimum set of input vectors that produce an output vector set that provides complete visibility of the internal nodes. Visibility in this context refers to the ability to detect if one or more shorted, opened, or stuck-at nodes exist in the array. By comparing a known good output vector set to the output vector set obtained from the untested array, one can determine if the device under test contains any critical faults. From a practical point of view, the behavioral tests must be conducted at intervals much greater than the time constant of the CNN cell to insure proper convergence. For instance, if a circuit had a time constant of 100ns, a valid time interval between test vectors would be selected as 100 times the time constant, or a time interval of 10 µs.

In an effort to simplify the testing methodology, we identified four different testing paths in the CNN architecture. The consequence of this observation is that the behavioral tests are divided into four segments, one for each of the testing paths. These paths are the initial condition path (Fig. 7a), the biasing path (Fig. 7b), the input path (Fig. 7c), and the feedback path (Fig. 7d). The initial condition path and the biasing path of each cell are tested in parallel with no interaction between adjacent cells. The input and feedback path test vectors insure that the multipliers and the interconnections between adjacent cells of the array are fault free. In our procedure the order of the behavioral tests is important as each successive test requires no previous faults. If a static test reveals a fault, all testing should be halted and the path containing the fault must be marked as faulty.

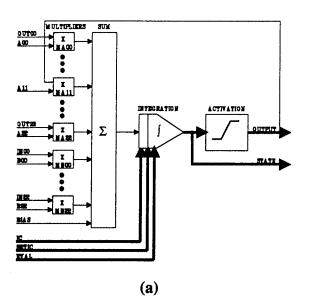

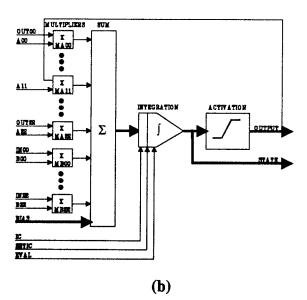

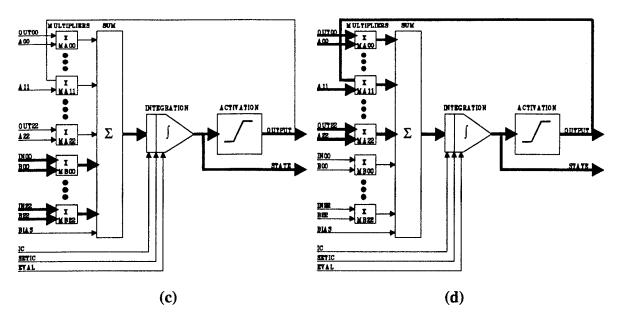


Fig. 7 - Testing Paths - (a) Initial Condition, (b) Biasing, (c) Input, (d) Feedback

The input vectors were designed so that every node in the array is toggled and the result is propagated to the output. By comparing the output of a known good array to the output of a device under test, we can identify paths that contain open, shorted, or stuck-at supply nodes. Although the tests cannot isolate the type or exact location of the fault, they do identify the path that contains the fault(s).

When testing the initial condition and bias paths, the expected output is the same for all cells within the array. To insure this characteristic, every element in the A and B templates is set to zero eliminating any interaction between adjacent cells. The strategy to test the input path is to change the B template and the input image so that every node in the input path is toggled. The expected output depends on the B template, the input image, and the location of the cell within the array. Testing of the feedback path depends upon the ability to set the A template and the *Border* such that every node in the feedback path is toggled. Naturally, the expected output depends on template A, the *Border* value, and the location of the cell within the array.

Eighteen unique testing templates are used to perform behavioral tests for both the multipliers corresponding to the A and B templates in the CNN array. Each of these templates contains only one non-zero element set to either the positive supply (VDD) or the negative supply (VSS). The testing templates were designed to propagate the inputs/outputs directionally so that every node is toggled and the multiplier's four quadrant operation is validated. The same templates are used for testing both the A and B multipliers, with different expected results. The template, location, and polarity of the non-zero element is defined by the notation Array:Polarity:Row:Column. All array element numbering is zero based. The top left hand corner element of the array is element [0,0] and the bottom right hand corner element is element [(M-1),(N-1)]. For example, testing template AN21 consists of all elements of the A template set to ZERO except for the third row, second column element that is set to VSS. When testing the input path, the expected output image is a propagated version of the input image. Note that if negative multiplier values are used, the expected output image is the result of the Border value propagated across the array. When negative multiplier values are used, the Border value is inverted as it is propagated across each cell in the array.

#### 6. Fault Identification

The first behavioral test segment (vectors 1-10) verifies the initial condition selection path. All test vectors presented in this section are located in Appendix 1. The purpose of the test is to determine if the initial condition can be properly initialized and extracted. The test requires manipulation of SetIC and IC. The feedback template, the control template, the Bias value, the Border value, the Eval value, and the INxx values are all set to ZERO to prevent the cell from having inadvertent initial states. The initial condition is set to the desired value by activating SetIC and applying the desired DC voltage to the IC pin of the array. The IC value charges the state capacitor to the desired value via SW1. The array is switched to hold mode by deactivating SetIC and the IC value is toggled to the two other possible DC initialization values to insure no interaction between the initialized state and the deselected IC value. The test verifies that each cell's SetIC, IC, integrator switch SW1, state node, and the activation functional block are all fault free. The process is repeated for each of the possible initial condition values (VDD, GND, and VSS). If any of the initial condition paths contained shorted, opened, or stuckate faults, the output vector set would differ from the known good output vector set. For example, if a stuck-at VDD fault were introduced into a cell's output, test vector #1 would indicate a difference between the actual output (VDD) and the expected value of the output (ZERO).

The second behavioral test segment (vectors 11-14) insures that the *Bias* signal correctly influences the output of each cell. The A template, the B template, the *Border* value, and the *INxx* values are set to *ZERO*. All cells are initialized to *MINUSV* and the *Bias* signal is changed from *PLUSV*, to *ZERO*, to *MINUSV*. The output of the cell should transition from *VDD*, to *GND*, to *VSS*. The test verifies that the *Bias* input, the bias path through the summer, and the summer to integrator path do not contain any static faults. For example, if a node in the *Biasing* path was opened, test vector #11 would indicate a difference between the actual output (*GND*) and the expected value of the output (*PLUSV*).

The third behavioral test segment (vectors 15-66) insures that the input path and the B multipliers are fault free. Template A, the *Border* value, and the *Bias* values are all set to *ZERO*. The *Eval* signal is constantly activated for all tests in this segment. The B template is chosen to directionally propagate the input image through each possible cell interconnection in the input path. The input images are chosen in inverted pairs so that during the test four quadrant multiplier operation is verified. The input image pairs consist of a positive/negative checkerboard pattern, alternating rows of black and white, and alternating columns of black and white as shown in Fig. 8.

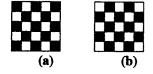










Fig. 8 - Input Testing Images - (a) IN00 Positive Checker Board, (b) IN01 Negative Checker Board, (c) IN02 Positive Rows, (d) IN03 Negative Rows, (e) IN04 Positive Columns, (f) IN05 Negative Columns

Note that in the pseudocode, we define image inversion with a tilde (~). If a tilde precedes an image, all elements are multiplied by -1, inverting the complete image. The resulting output image is the directional propagation of the input image through the selected multiplier path, to the output. The direction of propagation is determined by the non-zero element of the B template as shown in the Appendix. A few examples of the expected output images for this test are shown in Fig. 9 for reference.

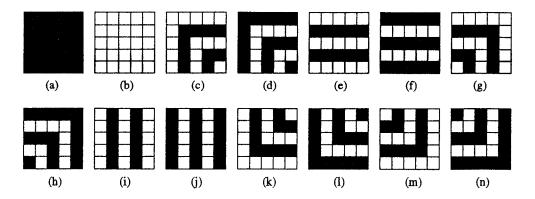


Fig. 9 - Expected Output Images - (a) *OUT00*, (b) *OUT01*, (c) *OUT02*, (d) *OUT03*, (e) *OUT04*, (f) *OUT05*, (g) *OUT06*, (h) *OUT07*, (i) *OUT08*, (j) *OUT09*, (k) *OUT10*, (l) *OUT11*, (m) *OUT12*, (n) *OUT13*,

Note that if a cell is gray, it contains a ZERO voltage. The ZERO voltage is only be seen at cells that receive their inputs from the Border value. The test verifies that the input image path, the control multipliers, and the multiplier to summer paths do not contain any faults. As an example consider the case when the output of the multiplier B00 is shorted to IC. Test vector #11 is used to detect the fault by indicating a difference between the actual output (GND) and the expected value of the output (MINUSV).

The fourth behavioral test segment (vectors 67-96) insures that the feedback path and the A multipliers are fault free. Template B, the IC value, and the Bias values are all set to ZERO. The Eval signal is constantly activated for all tests in this segment. The A template is chosen to directionally propagate the Border value though each possible cell interconnection in the feedback path. As discussed previously, the Border value is inverted to insure proper four quadrant operation of the A multipliers. The resulting output image is the directional propagation of the Border through the selected multiplier path, to the outputs. The direction of propagation is determined by the non-zero element of the A template as shown in the Appendix. The test verifies that the feedback path, the feedback multipliers, and the multiplier to summer paths do not contain any faults. If the feedback path contained nodes that are shorted, opened, or stuck-at a DC supply voltage, the output vector set would differ from the known good output vector set. For example, if the output of multiplier A00 in cell (2,2) were stuck-at GND, test vector #67 would indicate a difference between the actual output (GND) and the expected value of the output (PLUSV).

#### 7. Parametric Fault Testing

The parametric tests are designed to reveal excessive time constant mismatches, mismatched impedances, and voltage offsets. The tests require visibility of the non-saturated state of the array. If the cells within the array are equipped with STATE outputs, the tests make use of the full dynamic range of the array. If the cell only has the OUTPUT signal, the dynamic tests extract their information

when the state of the cell is in the linear region of the activation function. The state voltage range that results in an output in the linear range is defined as the *linear input range*. The capability to set the STATE to a known, non-saturated value allows us to determine if there is a fault. The B multipliers (control) are easily tested because we can control both of the inputs which are external to the array. The test sets the inputs of the multiplier to a fixed value and compares the output of the cell to the expected output voltage. The difference between the expected output and the actual output give a measure of the offset and impedance faults contained within each cell. The A multipliers (feedback) present a more difficult testing challenge because we no longer have independent control of each of the multiplier inputs. One of the inputs to the feedback multipliers is always obtained from the output of a cell within the immediate neighborhood. The Border is directionally propagated across the array and each cell in the propagation chain is measured to give a measure of the sum of the offsets and impedance faults in the chain. Faults detected using this method can not be easily localized.

The parametric tests are composed of three segments. The first parametric test segment verifies the time constants of each cell in the CNN array. The A template, the B template, and the *Border* value are fixed at *ZERO*. The cell is initialized to *GND* and a step is applied to the *Bias* input from *GND* to VDD. The cell output is sampled every 0.1  $\tau$  seconds for 10  $\tau$  seconds. The result of the test will indicate if each cell's time constant is within 1% of the specifications. The expected output voltage is determined by the equation:

$$V_{OUT} = V_{DD} - (V_{DD})(e^{-t/\tau})$$

For example, if the time constant of all cells in the array is  $t_{NOMINAL}$ =100ns, except for the center cell with  $t_{FAULT}$ =102ns, after 1 $\tau$  the unfaulted output voltage is Vout=3.161V and the faulted output voltage is Vout=3.197V. The test reveals the time constant fault because the faulted output requires 2% more time to converge to the final value of VDD.

The second parametric test segment checks for excessive impedance mismatches, non-linearity, and offsets in the B multipliers. Each multiplier line impedance should be much smaller than the load impedance. If it is not, we can detect a difference in the expected output voltage. If we zero both the A and B template, except for setting one of the B template elements to a fixed positive value, we can apply inputs that result in output voltages that are in the linear region of the activation function. When one of the multipliers inputs is fixed, the output will track the other multiplier input. The input is slowly swept (>100t) in the linear input range and multiple data points are sampled from either the OUTPUT or STATE outputs. The test is repeated for the other combination of holding one input constant while sweeping the other input. For example, if the supply voltages were VDD = |VSS| = 5.0 V and the activation slope Av=2 were chosen, the input range that results in the output in the linear region is from -2.5 V to +2.5 V. The input image voltage is fixed at +1.0V and the B template input is swept from -2.5 V to +2.5 V in 50 mV increments resulting in 100 data points. The test is repeated for the B template fixed at +1.0V and the input image swept from -2.5 V to +2.5 V in 50 mV increments. The data is analyzed to insure the output voltage is more than 90% of the input voltage and that the output is within 10% of fault free expected result. Although we can detect offset and impedance faults, we cannot discriminate between them.

The third parametric test segment checks for faults in the A multipliers. If both the A and B template are set to ZERO, except for setting one of the eight peripheral elements set to a fixed positive value, we can select a Border value that results in an output voltage that is in the linear region of the activation function. The center template value (A11) is excluded from this test since the feedback from a cell to itself would result a saturation or oscillation condition occurring after the evaluation phase has commenced. The Border is slowly swept (>100t) in the linear input range and multiple data points are sampled from either the OUTPUT or STATE output. For example, the A template is fixed at +1.0V

and the *Border* template input is swept from -2.5 V to +2.5 V in 50 mV increments resulting in 100 data points. The data is analyzed to insure the output voltage is more than 90% of the input voltage and that the output is within 10% of fault free expected result.

#### 8. Fault Case Studies

To show the versatility of the CNN testing strategy, we analyze the operation of a 5x5 voltage mode CNN using a hardware macromodel processing an image using an edge detection template. The macromodel was generated using CNNSPICE, a program developed for generating MxN CNN array macromodels. The integration resistor was chosen to be 100K ohms and the integration capacitor was chosen to be 1pF resulting in a time constant of t=100ns. The supplies were selected to be BLACK=VDD=(+5.0V) and WHITE=VSS=(-5.0V). An activation slope of Av=2 was chosen for this simulation to insure stable outputs when the absolute value of the state of the cell is greater than 2.5 volts. In the voltage mode CNN, the sum of the output resistance of the voltage summer and the integration resistor, along with the integration capacitance, determine the time constant of the array. Typically, the output impedance of the voltage summer is small, thus the integration resistance dominates.

In this presentation, we will introduce four behavioral faults and three parametric faults into our voltage mode macromodel of a CNN. All of the faults were introduced into the center cell of the array for simplicity. The faults consist of: (1) SetIC stuck at VDD, (2) Integrator input shorted to IC, (3) Summer output opened, (4) Feedback multiplier A11 output stuck-at VSS, (5) a 2% time constant fault, (6) a 10% offset voltage in input 1 of multiplier B11, and (7) a excessive impedance mismatch where the line impedance is 10% of the load impedance at the input of input 1 of multiplier A01. The testing results clearly show that behavioral fault detection is possible. Fig. 10 shows the comparison between the unfaulted and the SetIC stuck at VDD fault case. Based on vectors 2 through 10 the expected output is ZERO at time 15 \mus, VDD at time 40 \mus, and VSS at time 70 \mus. The faulted output clearly indicates a discrepancy at times 15µs-30µs, 40µs-60µs, and 70µs-90µs indicating that a fault exists in the initial condition path. Fig. 11 shows the comparison between the unfaulted case and the integrator input shorted to IC fault case. Using vectors 11 through 14 the expected output is VSS at time 105 µs, GND at time 110µs, and VDD at time 120µs. The faulted output clearly indicates a discrepancy at times 105\(\mu\)s-110\(\mu\)s and 120\(\mu\)s-135\(\mu\)s indicating that a fault exists in the biasing path. Fig.12 shows the comparison between the unfaulted and the summer output opened fault case. The expected output is VSS at time 150µs, VDD at time 160µs, and VSS at time 180µs according to vectors 15 through 22. The faulted output clearly indicates a discrepancy at times 145µs-215µs indicating a fault exists in the input image path. Fig. 13 shows the comparison between the unfaulted and the feedback multiplier A11 output stuck-at VSS fault case. The expected output is VDD at time 790 µs, ZERO at time 800 µs, and VDD at time 810 µs. The faulted output clearly indicates a discrepancy at time 785 µs-800 µs and 810µs-815µs indicating a fault exists in the feedback path.

The dynamic test results revealed faults that exist in the feedback path. Fig. 14 shows the comparison between the unfaulted and a 2% time constant fault. The expected output after 1.3t is Vout=3.637 V. The faulted output has only reached Vout=3.6V after 1.3t indicating a 2% time constant mismatch. Fig. 15 shows the comparison between the unfaulted and a 10% offset fault in A input of the B11 multiplier. When sweeping the A input of multiplier in the *linear input range*, the output clearly indicates a difference between the expected values between -2.5V to +2.5V and the actual output voltages of -1.25V to +1.25V. Fig. 16 shows the comparison between the unfaulted and a impedance fault in A input of the A01 multiplier. The faulted output clearly indicates a 10% difference between the expected and actual output voltages.

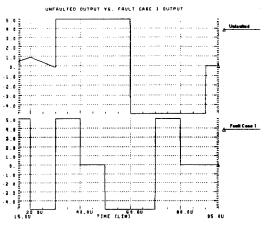


Fig. 10 - Static Fault Case 1

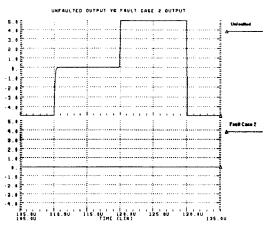


Fig. 11 - Static Fault Case 2

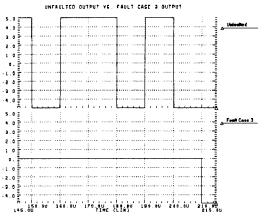
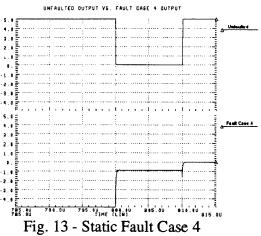


Fig. 12 - Static Fault Case 3



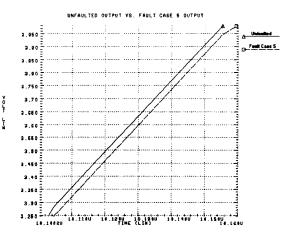


Fig. 14 - Dynamic Faulty Case 1

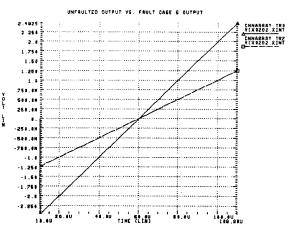


Fig. 15 - Dynamic Fault Case 2

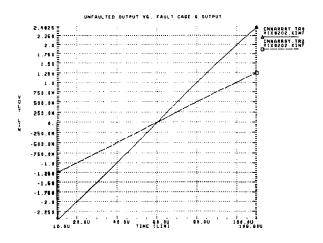


Fig. 16 - Dynamic Fault Case 3

#### 9. Conclusions

In this report we have presented a strategy for macromodeling hardware implementations of two-dimensional CNN's. We have shown that the macromodels can be useful when developing testing strategies for VLSI implementations of CNN arrays by presenting a strategy for testing hardware implementations of two-dimensional CNN's. We have demonstrated that the tests provide extensive fault coverage independent of the circuit topology. We improved the testability of the CNN by breaking the cell into a four different testing paths. Detailed test vectors were provided to demonstrate the effectiveness of the testing strategy. The parametric tests were developed based upon the properties inherent to the CNN architecture. The testing strategy was used to analyze the effect of seven different faults introduced into a macromodel of a 5x5 voltage mode CNN array. The macromodel simulation results prove that faults may be detected by applying the test methods presented in this report.

#### 10. References

- [1] L.O. Chua and L. Yang, "Cellular Neural Networks: Applications," *IEEE Trans. Circuits Syst.*, vol. 35, pp.1273-1290, 1988.
- [2] L.O. Chua and L. Yang, "Cellular Neural Networks: Theory," *IEEE Transactions on Circuits and Systems*, vol. 35, pp.1257-1272, 1988.
- [3] C. C. Lee and J. Pineda de Gyvez, "Single-Layer CNN Simulator," *IEEE International Symposium on Circuits and Systems*, pp.217-220, London, 1994.
- [4] J.E. Varrientos and E. Sanchez-Sinencio, "CELLSIM: A CNN Simulator for the Personal Computer," *Proc. of 35th Midwest Symposium on Circuits and Systems*, pp.1384-1387, Washington, 1988.
- [5] J. Pineda, "XCNN: A Software Package For Color Image Processing," *Proc. IEEE Intl. Workshop Cellular Neural Networks Appl., CNNA-94*, Rome, 1994.

### 11. Appendix

| Static Test | Segment #    | 1 Vectors - | Test Initial    | <b>Condition Path</b> |
|-------------|--------------|-------------|-----------------|-----------------------|
| Dune I wi   | COMMITTEE II |             | 1 COL IIII HUII | Condidon I dui        |

| Vector | Time | A[00:22] | B[00:22] | Bias  | SetIc | Eval | Border | Input | IC     | Expected Output |
|--------|------|----------|----------|-------|-------|------|--------|-------|--------|-----------------|
| 1      | 0u   | ZERO,    | ZERO,    | ZERO, | LOW,  | LOW, | ZERO,  | ZERO, | ZERO   | ZERO            |
| 2      | 10u  | ZERO,    | ZERO,    | ZERO, | HIGH, | LOW, | ZERO,  | ZERO, | ZERO   | ZERO            |
| 3      | 20u  | ZERO,    | ZERO,    | ZERO, | LOW,  | LOW, | ZERO,  | ZERO, | PLUSV  | ZERO            |
| 4      | 30u  | ZERO,    | ZERO,    | ZERO, | LOW,  | LOW, | ZERO,  | ZERO, | MINUSV | ZERO            |
| 5      | 40u  | ZERO,    | ZERO,    | ZERO, | HIGH, | LOW, | ZERO,  | ZERO, | PLUSV  | PLUSV           |
| 6      | 50u  | ZERO,    | ZERO,    | ZERO, | LOW,  | LOW, | ZERO,  | ZERO, | ZERO   | PLUSV           |
| 7      | 60u  | ZERO,    | ZERO,    | ZERO, | LOW,  | LOW, | ZERO,  | ZERO, | MINUSV | PLUSV           |
| 8      | 70u  | ZERO,    | ZERO,    | ZERO, | HIGH, | LOW, | ZERO,  | ZERO, | MINUSV | MINUSV          |
| 9      | 80u  | ZERO,    | ZERO,    | ZERO, | LOW,  | LOW, | ZERO,  | ZERO, | PLUSV  | MINUSV          |
| 10     | 90u  | ZERO,    | ZERO,    | ZERO, | LOW,  | LOW, | ZERO,  | ZERO, | ZERO   | MINUSV          |

## Static Test Segment # 2 Vectors - Test Bias Path

| Vector | <u>Time</u> | A[00:22] | B[00:22] | Bias    | SetIc | Eval  | Border | Input | _IC    | Expected Output |
|--------|-------------|----------|----------|---------|-------|-------|--------|-------|--------|-----------------|
| 11     | 100u        | ZERO,    | ZERO,    | ZERO,   | HIGH, | LOW,  | ZERO,  | ZERO, | MINUSV | MINUSV          |
| 12     | 110u        | ZERO,    | ZERO,    | PLUSV,  | LOW,  | HIGH, | ZERO,  | ZERO, | ZERO   | PLUSV           |
| 13     | 120u        | ZERO,    | ZERO,    | ZERO,   | LOW,  | HIGH, | ZERO,  | ZERO, | ZERO   | ZERO            |
| 14     | 130u        | ZERO,    | ZERO,    | MINUSV. | LOW,  | HIGH, | ZERO,  | ZERO, | ZERO   | MINUSV          |

Static Test Segment # 3 Vectors - Test Input and Control Paths

A[00:22]B[00:22] Bias SetIc Eval Border Input IC Expe

| Vector | Time | A[00:22 | ]B[00:22] | Bias  | SetIc | Eval  | Border | Input | IC   | Expected Output  |
|--------|------|---------|-----------|-------|-------|-------|--------|-------|------|------------------|
| 15     | 140u | ZERO,   | BP00,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN02, | ZERO | DownRight(IN02)  |
| 16     | 150u | ZERO,   | BP00,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN03, | ZERO | DownRight(IN03)  |
| 17     | 160u | ZERO,   | BP00,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN04, | ZERO | DownRight(IN04)  |
| 18     | 170u | ZERO,   | BP00,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN05, | ZERO | DownRight(IN05)  |
| 19     | 180u | ZERO,   | BN00,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN02, | ZERO | -DownRight(IN02) |
| 20     | 190u | ZERO,   | BN00,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN03, | ZERO | ~DownRight(IN03) |
| 21     | 200u | ZERO,   | BN00,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN04, | ZERO | ~DownRight(IN04) |
| 22     | 210u | ZERO,   | BN00,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN05, | ZERO | ~DownRight(IN05) |
| 23     | 220u | ZERO,   | BP01,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN02, | ZERO | Down(IN02)       |
| 24     | 230u | ZERO,   | BP01,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN03, | ZERO | Down(IN03)       |
| 25     | 240u | ZERO,   | BN01,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN02, | ZERO | ~Down(IN02)      |
| 26     | 250u | ZERO,   | BN01,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN03, | ZERO | ~Down(IN03)      |
| 27     | 260u | ZERO,   | BP02,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN02, | ZERO | DownLeft(IN02)   |
| 28     | 270u | ZERO,   | BP02,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN03, | ZERO | DownLeft(IN03)   |
| 29     | 280u | ZERO,   | BP02,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN04, | ZERO | DownLeft(IN04)   |
| 30     | 290u | ZERO,   | BP02,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN05, | ZERO | DownLeft(IN05)   |
| 31     | 300u | ZERO,   | BN02,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN02, | ZERO | ~DownLeft(IN02)  |
| 32     | 310u | ZERO,   | BN02,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN03, | ZERO | ~DownLeft(IN03)  |
| 33     | 320u | ZERO,   | BN02,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN04, | ZERO | ~DownLeft(IN04)  |
| 34     | 330u | ZERO,   | BN02,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN05, | ZERO | -DownLeft(IN05)  |
| 35     | 340u | ZERO,   | BP10,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN04, | ZERO | Right(IN04)      |
| 36     | 350u | ZERO,   | BP10,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN05, | ZERO | Right(IN05)      |
| 37     | 360u | ZERO,   | BN10,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN04, | ZERO | ~Right(IN04)     |
| 38     | 370u | ZERO,   | BN10,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN05, | ZERO | ~Right(IN05)     |
| 39     | 380u | ZERO,   | BP11,     | ZERO, | LOW,  | HIGH, | ZERO,  | INOO, | ZERO | IN00             |
| 40     | 390u | ZERO,   | BP11,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN01, | ZERO | IN01             |
| 41     | 400u | ZERO,   | BN11,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN00, | ZERO | ~IN00            |
| 42     | 410u | ZERO,   | BN11,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN01, | ZERO | ~IN01            |
| 43     | 420u | ZERO,   | BP12,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN04, | ZERO | Left (IN04)      |
| 44     | 430u | ZERO,   | BP12,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN05, | ZERO | Left (IN05)      |
| 45     | 440u | ZERO,   | BN12,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN04, | ZERO | ~Left (INO4)     |
| 46     | 450u | ZERO,   | BN12,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN05, | ZERO | ~Left (IN05)     |
| 47     | 460u | ZERO,   | BP20,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN02, | ZERO | UpRight(IN02)    |
| 48     | 470u | ZERO,   | BP20,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN03, | ZERO | UpRight(IN03)    |
| 49     | 480u | ZERO,   | BP20,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN04. | ZERO | UpRight(IN04)    |
| 50     | 490u | ZERO,   | BP20,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN05, | ZERO | UpRight(IN05)    |
| 51     | 500u | ZERO,   | BN20,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN02, | ZERO | ~UpRight(IN02)   |
| 52     | 510u | ZERO,   | BN20,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN03, | ZERO | ~UpRight(IN03)   |
| 53     | 520u | ZERO,   | BN20,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN04, | ZERO | ~UpRight(IN04)   |
| 54     | 530u | ZERO,   | BN20,     | ZERO, | LOW,  | HIGH, | ZERO,  | IN05, | ZERO | ~UpRight(IN05)   |
|        |      |         |           |       |       |       |        |       |      | 2 U (m. 14)      |

| 55 | 540u | ZERO. | BP21. | ZERO. | LOW. | HIGH. | ZERO. | IN02. | ZERO | Up(IN02)      |
|----|------|-------|-------|-------|------|-------|-------|-------|------|---------------|
| 56 | 550u | ZERO, | BP21, | ZERO, | LOW, | HIGH, | ZERO, | IN03, | ZERO | Up(IN03)      |
| 57 | 560u | ZERO, | BN21, | ZERO, | LOW, | HIGH, | ZERO, | IN02, | ZERO | ~Up(IN02)     |
| 58 | 570u | ZERO, | BN21, | ZERO, | LOW, | HIGH, | ZERO, | IN03, | ZERO | ~Up(IN03)     |
| 59 | 580u | ZERO, | BP22, | ZERO, | LOW, | HIGH, | ZERO, | IN02, | ZERO | UpLeft(IN02)  |
| 60 | 590u | ZERO, | BP22, | ZERO, | LOW, | HIGH, | ZERO, | IN03, | ZERO | UpLeft(IN03)  |
| 61 | 600u | ZERO, | BP22, | ZERO, | LOW, | HIGH, | ZERO, | IN04, | ZERO | UpLeft(IN04)  |
| 62 | 610u | ZERO, | BP22, | ZERO, | LOW, | HIGH, | ZERO, | IN05, | ZERO | UpLeft(IN05)  |
| 63 | 620u | ZERO, | BN22, | ZERO, | LOW, | HIGH, | ZERO, | IN02, | ZERO | ~UpLeft(IN02) |
| 64 | 630u | ZERO, | BN22, | ZERO, | LOW, | HIGH, | ZERO, | IN03, | ZERO | ~UpLeft(IN03) |
| 65 | 640u | ZERO, | BN22, | ZERO, | LOW, | HIGH, | ZERO, | IN04. | ZERO | ~UpLeft(IN04) |
| 66 | 650u | ZERO, | BN22, | ZERO, | LOW, | HIGH, | ZERO, | IN05, | ZERO | ~UpLeft(IN05) |

Static Test Segment # 4 Vectors - Test Output and Feedback Paths

|        |             |       |           |       |       |       | t Output and In |      |                 |
|--------|-------------|-------|-----------|-------|-------|-------|-----------------|------|-----------------|
| Vector | <u>Time</u> |       | [B[00:22] | Bias  | SetIc | Eval  | Border Input    | IC   | Expected Output |
| 67     | 660u        | AP00, | ZERO,     | ZERO, | LOW,  | HIGH, | PLUSV, ZERO,    | ZERO | Out00           |
| 68     | 670u        | AP00, | ZERO,     | ZERO, | LOW,  | HIGH, | MINUSV, ZERO,   | ZERO | Out01           |
| 69     | 680u        | AN00, | ZERO,     | ZERO, | LOW,  | HIGH, | PLUSV, ZERO,    | ZERO | Out02           |
| 70     | 690u        | AN00, | ZERO,     | ZERO, | LOW,  | HIGH, | MINUSV, ZERO,   | ZERO | Out03           |
| 71     | 700u        | AP01, | ZERO,     | ZERO, | LOW,  | HIGH, | PLUSV, ZERO,    | ZERO | Out00           |
| 72     | 710u        | AP01, | ZERO,     | ZERO, | LOW,  | HIGH, | MINUSV, ZERO,   | ZERO | Out01           |
| 73     | 720u        | AN01, | ZERO,     | ZERO, | LOW,  | HIGH, | PLUSV, ZERO,    | ZERO | Out04           |
| 74     | 730u        | AN01, | ZERO,     | ZERO, | LOW,  | HIGH, | MINUSV, ZERO,   | ZERO | Out05           |
| 75     | 740u        | AP02, | ZERO,     | ZERO, | LOW,  | HIGH, | PLUSV, ZERO,    | ZERO | Out00           |
| 76     | 750u        | AP02, | ZERO,     | ZERO, | LOW,  | HIGH, | MINUSV, ZERO,   | ZERO | Out01           |
| 77     | 760u        | AN02, | ZERO,     | ZERO, | LOW,  | HIGH, | PLUSV, ZERO,    | ZERO | Out06           |
| 78     | 770u        | AN02, | ZERO,     | ZERO, | LOW,  | HIGH, | MINUSV, ZERO,   | ZERO | Out07           |
| 79     | 780u        | AP10, | ZERO,     | ZERO, | LOW,  | HIGH, | PLUSV, ZERO,    | ZERO | Out00           |
| 80     | 790u        | AP10, | ZERO,     | ZERO, | LOW,  | HIGH, | MINUSV, ZERO,   | ZERO | Out01           |
| 81     | 800u        | AN10, | ZERO,     | ZERO, | LOW,  | HIGH. | PLUSV, ZERO,    | ZERO | Out08           |
| 82     | 810u        | AN10. | ZERO,     | ZERO. | LOW,  | HIGH, | MINUSV, ZERO,   | ZERO | Out09           |
| 83     | 820u        | AP11, | ZERO,     | ZERO, | HIGH. | LOW.  | ZERO, ZERO,     | ZERO | ZERO            |
| 84     | 830u        | AP11. | ZERO,     | ZERO. | LOW.  | HIGH. | ZERO, ZERO,     | ZERO | ZERO            |
| 85     | 840u        | AP12, | ZERO.     | ZERO. | LOW,  | HIGH. | PLUSV, ZERO,    | ZERO | Out00           |
| 86     | 850u        | AP12, | ZERO,     | ZERO. | LOW,  | HIGH. | MINUSV, ZERO,   | ZERO | Out01           |
| 87     | 860u        | AN12, | ZERO.     | ZERO. | LOW,  | HIGH. | PLUSV, ZERO,    | ZERO | Out08           |
| 88     | 870u        | AN12, | ZERO.     | ZERO. | LOW,  | HIGH, | MINUSV, ZERO,   | ZERO | Out09           |
| 89     | 880u        | AP20, | ZERO,     | ZERO, | LOW,  | HIGH, | PLUSV, ZERO,    | ZERO | Out00           |
| 90     | 890u        | AP20, | ZERO,     | ZERO, | LOW,  | HIGH. | MINUSV, ZERO,   | ZERO | Out01           |
| 91     | 900u        | AN20, | ZERO.     | ZERO. | LOW,  | HIGH. | PLUSV, ZERO,    | ZERO | Out10           |
| 92     | 910u        | AN20, | ZERO,     | ZERO, | LOW,  | HIGH. | MINUSV, ZERO,   | ZERO | Out11           |
| 93     | 920u        | AP21, | ZERO,     | ZERO. | LOW.  | HIGH. | PLUSV, ZERO,    | ZERO | Out00           |
| 94     | 930u        | AP21, | ZERO,     | ZERO. | LOW.  | HIGH. | MINUSV, ZERO,   | ZERO | Out01           |
| 95     | 940u        | AN21, | ZERO.     | ZERO. | LOW,  | HIGH. | PLUSV, ZERO,    | ZERO | Out04           |
| 96     | 950u        | AN21, | ZERO.     | ZERO. | LOW,  | HIGH. | MINUSV, ZERO,   | ZERO | Out05           |
| 97     | 960u        | AP22, | ZERO,     | ZERO, | LOW,  | HIGH, | PLUSV, ZERO,    | ZERO | Out00           |
| 98     | 970u        | AP22, | ZERO.     | ZERO. | LOW,  | HIGH, | MINUSV, ZERO,   | ZERO | Out01           |
| 99     | 980u        | AN22, | ZERO,     | ZERO. | LOW,  | HIGH, | PLUSV, ZERO,    | ZERO | Out12           |
| 100    | 990u        | AN22, | ZERO,     | ZERO. | LOW,  | HIGH, | MINUSV, ZERO,   | ZERO | Out13           |
|        |             | ,     | ,         | '     | ,     | . 7   | ,,              |      |                 |

## A Template (Feedback) Propagation Mapping

Non-Zero Directon of

| Element | Propagation | Expected Output Image            |
|---------|-------------|----------------------------------|
| A00     | Down/Right  | Border propagated down and right |
| A01     | Down        | Border propagated down           |
| A02     | Down/Left   | Border propagated down and left  |
| A10     | Right       | Border propagated right          |
| A11     | None        | Hold the last state              |
| A12     | Left        | Border propagated left           |
| A20     | Up/Right    | Border propagated up and right   |
| A21     | Up          | Border propagated up             |
| A22     | Up/Left     | Border propagated up and left    |

# **B Template (Control) Propagation Mapping**

Non-Zero Directon of

| Element | Propagation | Expected Output Image                            |
|---------|-------------|--|
| B00     | Down/Right  | Input imaged shifted down lunit and right lunit  |
| B01     | Down        | Input imaged shifted down 1 unit                 |
| B02     | Down/Left   | Input imaged shifted down 1 unit and left 1 unit |
| B10     | Right       | Input image shifted right 1 unit                 |
| B11     | None        | Input image not shifted                          |
| B12     | Left        | Input image shifted left 1 unit                  |
| B20     | Up/Right    | Input image shifted up 1 unit and right 1 unit   |
| B21     | Up          | Input image shifted up 1 unit                    |
| B22     | Up/Left     | Input image shifted up 1 unit and left 1 unit    |

### Form Approved REPORT DOCUMENTATION PAGE OMB No. 0704-0188 Public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing the "lifertion of information". Send comments regarding this burden estimate or any other aspect of this collection of information including suggestions for reducing this burden to Wishington Headquarters Services, Directorate for Information Operations and Reports, 121 Jefferson Davis High Nav. Suite 1204. Aillington, VA 22202 4302, and to the Office of Management and Budget. Paperwork Reduction Project (0704-0188), Washington, DC 20503. 3. REPORT TYPE AND DATES COVERED 1. AGENCY USE ONLY (Leave blank) 2 REPORT DATE February 10, 1995 Technical Report 11/10/95 - 2/01/95 5. FUNDING NUMBERS 4. TITLE AND SUBTITLE Robust Testing of Cellular Neural Networks N99914-94-1-0516 6. AUTHOR(S) Jose Pineda de Gyvez 8. PERFORMING ORGANIZATION 7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES) REPORT NUMBER Texas Engineering Experiment Station Texas A&M University 93-549/#4 10. SPONSORING / MONITORING 9. SPONSORING / MONITORING AGENCY NAME(S) AND ADDRESS(ES) AGENCY REPORT NUMBER Office of Naval Research Code 214: JWK Ballston Tower One 800 North Quincy Street Arlington, Virginia 22217-5660 11. SUPPLEMENTARY NOTES 12b. DISTRIBUTION CODE 12a. DISTRIBUTION / AVAILABILITY STATEMENT A: Approved for public release: distribution unlimited 13. ABSTRACT (Maximum 200 words) A method for detecting circuit faults within two dimensional Cellular Neural Network (CNN) arrays is presented. The need to develop robust methods for detecting faults is driven by the lack of visibility of the internal nodes in VLSI implementations of CNN arrays. The method is composed of both behavioral and parametric tests and detects faults independent of the size or topology of the CNN array. The behavioral tests reveal nodes that exhibit opened, shorted, or stuck-at a supply voltage faults. The parametric tests reveal excessive time constant mismatches, impedance mismatches and voltage offsets. Seven fault cases are introduced into a macromodel of a voltage mode CNN array to provide insight to the usefulness of the proposed testing methodology. 15. NUMBER OF PAGES 14. SUBJECT TERMS 16 Cellular Neural Networks, Testing 16. PRICE CODE 20. LIMITATION OF ABSTRACT 18. SECURITY CLASSIFICATION SECURITY CLASSIFICATION 17. SECURITY CLASSIFICATION OF REPORT OF THIS PAGE OF ABSTRACT Unclassified Unclassified Unclassified